



- General
- Options
- Casing
- Lintel
- Sill
- Sash
- Frame
- Lites
- Shape
- Arch
- Treatments
- Shutters
- Opening Indicators
- Rough Opening
- Framing
- Energy Values
- Layer
- Materials
- Label
- Components
- Object Information
- Schedule

Window Type: Use Default

Size and Position

Width: 57"

Height: 24"

Elevation Reference: From Floor

Floor to Top: 132"

Floor to Bottom: 108"

Component Options

Component Size: 0"

Hinge Options: Fixed Left Hinge Right Hinge

Left ☐ ☒ ☐

Center ☒ ☐ ☐

Right ☐ ☐ ☒

Options

Louver Size: 1"



Exterior

Door label (D08) shows up on second floor. There is a window above this door, but it cannot be located unless you Tab and select in the dialog box.

Once you select it, the Window Specification dbx opens, but it does not indicate anywhere what number it is. To find out the number you have to go to the Window Schedule.

Is there a setting somewhere that will list the window number on the floor plan?