


Typ. Pocket Door Frame kit studs
2" x 1" or 5/4" depending on MFG



2'-7"

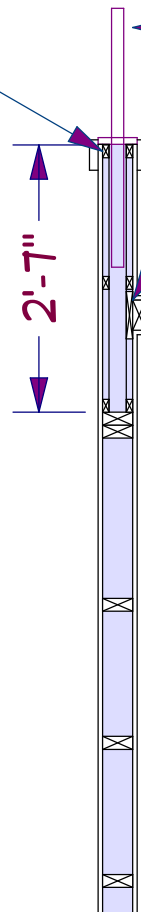

Typ 2668 Pocket Door

1" x 6" T Block stud this will give you the
room for drywall attachment

