


I need this angled soffit to turn the corner and go down soffit B
(shown in red)

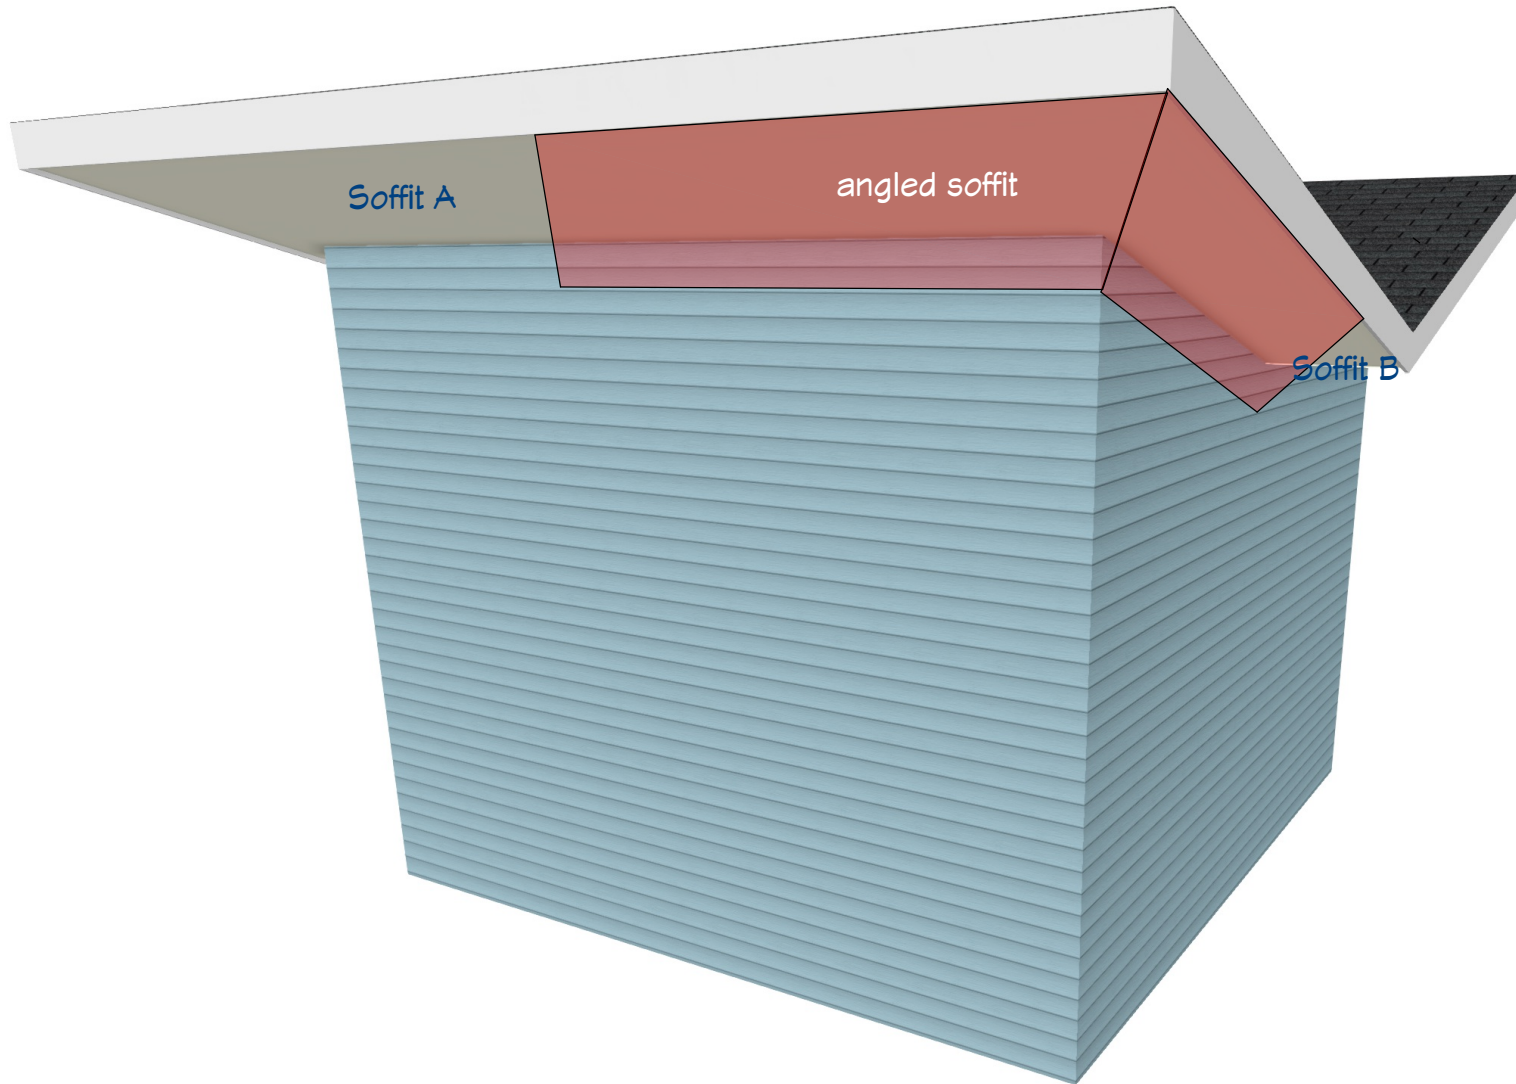

I can make the sloped soffit on soffit A with a polyline solid or molding polyline, but cannot do the same on soffit B because I can't get a PS to slope in two directions. I also tried a shadow board, but it has similar issues.